

Quick Start Guide

Caution

- 1 Verify the local voltage and receptacle type are correct for the scale.
- 2 Place the scale on a level stable surface.
- 3 Avoid sudden temperature changes, vibration, wind and water.
- 4 Avoid load the weight exceed the maximum capacity on the platform
- 5 Please refer to operating instructions specified in manual.
- 6 When clean the scale, please disconnect the power

Unpacking

- 1 Remove the scale from the carton.
- 2 Remove the protective covering.
- 3 Store the packaging and to use if you need to transport the scale later.
- 4 Inspect the scale for damage.
- 5 Make sure all components are included


No.	Name	QTY
1	Weighing Scale	1
2	Adapter	1
3	Stainless steel pan	1
4	Quick start guide	1
5	Manual	1
6	RS232 assembly	1
7	Verification Certificate	1

Leveling

- 1 The scale is equipped with a level indicator located left side of keyboard
- 2 Use the adjustable leveling feet located on the bottom of the scale until the bubble appears in the center of the indicator.



Level bubble

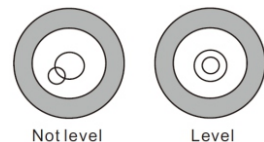


Installation

- 1 Remove transport lock from bottom of the scale base.
(only AW20 Capacity 6kg model)
- 2 Install the stainless steel pan on top of the housing.


Power Connection

- 1 Connect the adaptor pin in to the indicator adaptor jack. Adaptor jack is locating bottom of the scale.
- 2 Adaptor connects into your AC power socket. Pluggable equipment must be installed near an easily accessible socket outlet with a protective ground/ earth contact.

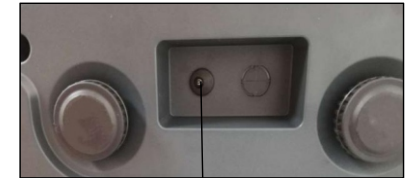

Adaptor jack

Keyboard

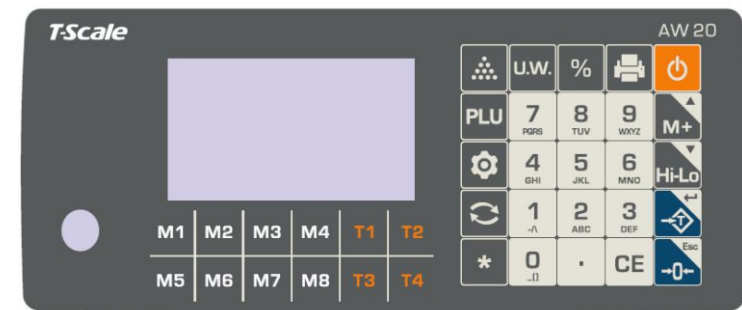

Icon	Name	Description
	On/OFF key	1 Press to turn the scale on 2 Long press to turn the scale off
	Print key	1 Used to print weighing data in normal weighing mode 2 Used to print reports when in report mode
	Percentage key	1 Used to enter percentage mode in normal weighing mode
	Unit Weight key	1 Store the known unit weight of item 2 Long press to change the unit weight value of item
	Sampling key	1 Used to enter the counting operation
	Product key	1 Used to recall product information 2 Long press to search product information from list
	Menu key	1 Used to enter parameter setting 2 Long press to check the set parameter information

	Local/Remote key	1 Used to change weighing units 2 Shift to capital letter / small letter when entering characters 3 Long press to switch local scale to remote scale
	Reserved key	Reserved function
	Alphanumeric keys	1 Input number in weighing mode 2 Input numeric and alphabet in parameters and PLU setting
	Clear key	1 Used to clear selected products and numeric keys 2 Short press to clear one bit, long press to clear all
	Zero key	1 Used to zero the scale 2 Long press to exit counting or percentage mode 3 Used as a exit key in parameter setting
	Tare key	1 Used to perform a tare function, Subtracts weights. 2 Used as a confirm key in parameter setting
	Limit key	1 Press to enter check mode 2 Long press to set HI and Low limits 3 Used to scroll down the page in parameter setting
	Accumulation key	1 Used to store the accumulation weights in memory 2 Used to recall accumulation records 3 Used to scroll up the page in parameter setting
M1~M8	Direct PLU	1 To recall direct PLU 2 Long press to store direct PLU
T1~T4	Pre-tare key	1 To recall the pre-tare value 2 Long press to store pre-tare value

Indication




- 1 Measurement information
- 2 Weight display
- 3 Product Information display
- 4 Range Circle Display Bar

Power On/Off

Press  key to switch power-up, Hold  key 1.5 seconds to switch off the scale.

Interfaces

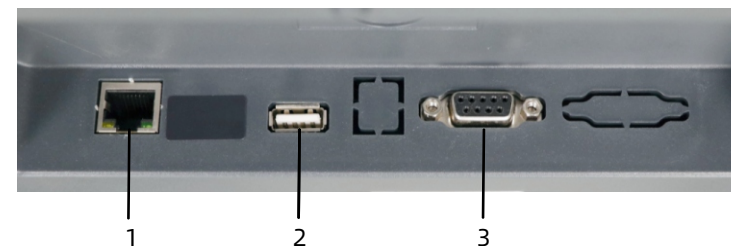

No.	Interface	Quantity	Description
1	RJ45	1	Support 10M/100M Ethernet
2	USB2.0	1	For USB disk/ scanner /data transfer
3	RS232	1	For connecting computer / printer/alarm light Remote display/Second platform

For the full operation manual, please scan the QR code below:



Website



AW20 Manual