


Quick Start Guide

TP80G/TP80GL

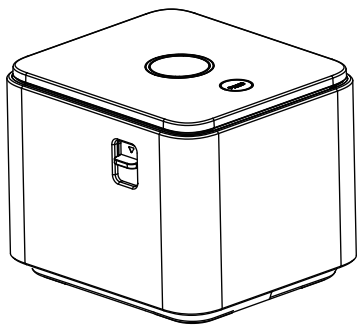


Manufacturer: Xiamen Hanin Co.,Ltd.

Address: No.96, Rongyuan Road, Tong'an District, Xiamen, Fujian, China 361100


E-mail: support@hpert.com

Web: www.hpert.com

Packing List

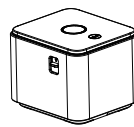


Printer

 

USB Cable



 Power Cord



Power Adapter




Quick Start Guide

Note: The power adapter and power cord vary by local or region.


Appearance and Components

■ Front

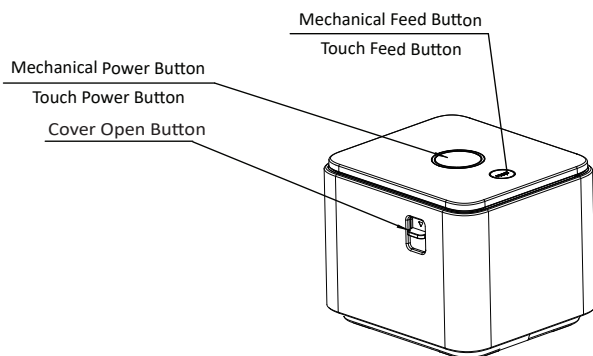

⚠ Touch and mechanical button are optional, please subject to the actual order.


■ Rear

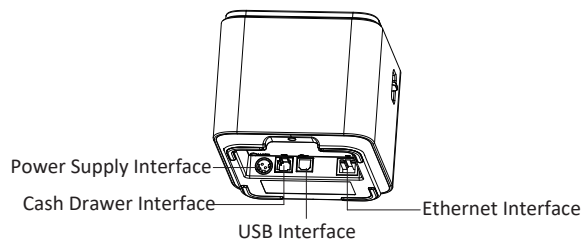



⚠ Bluetooth and Wi-Fi are embedded in the printer.
All the above interfaces are optional, please subject to the actual order.

Paper Loading


1. Press the cover open button to open the printer cover.

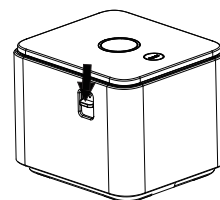


2. In the correct direction of the roll paper, install the roll paper.

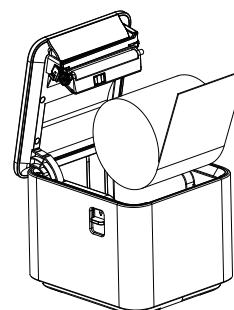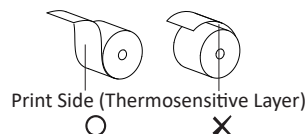

3. Pull out some roll paper, and close the printer cover.

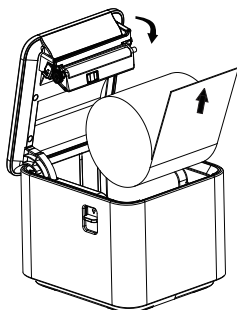


4. Tear the extra paper in the direction of printer.

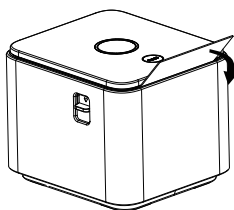

Power Supply

1. Connect power adapter with printer.
2. Connect power adapter with power cord.
3. Plug the other side of power cord into the socket outlet.

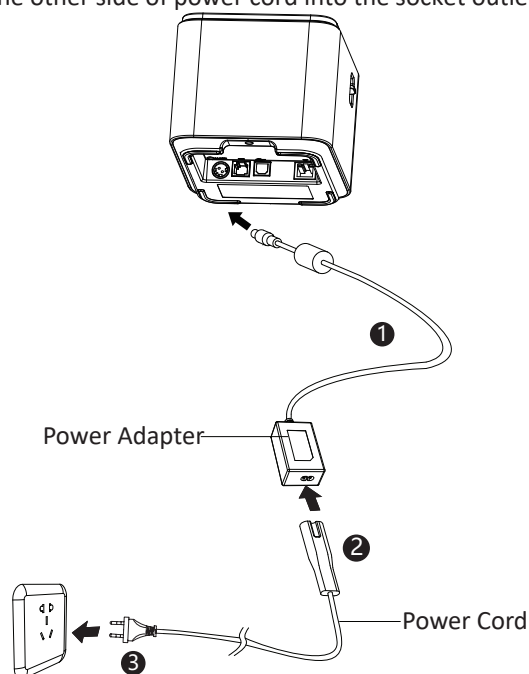

⚠ Note: The power adapter and power cord vary by country or region.

Warning: Operation of this equipment in a residential environment could cause radio interference.

Bluetooth/Wi-Fi/Ethernet Settings

1. Bluetooth Settings

Default name: BT Printer-xxxx (xxxx is the last four digits of MAC address)

Default password: 0000 or 1234

Please refer to User Manual for details.

Note: This setting is only available for models with Bluetooth.

2. Wi-Fi Settings

Printer WiFi factory default is AP mode with IP address "192.168.1.1" and SSID "POS_WIFI-xxxx" (xxxx is the last four digits of MAC address). After the PC or mobile phone is connected with printer successfully, users can do some parameter settings through utility tool.

Please refer to User Manual for details.

Note: This setting is only available for models with Wi-Fi.

3. Ethernet Settings

Connect the printer to router (or master device) through the network cable;

The default Ethernet mode is Static IP Mode with IP address "192.168.0.31";

Ethernet interface parameters can be set through POS utility or web (Master device and printer are under the same network segment, enter 192.168.0.31 in master device browser); Please refer to User Manual for details.

Note: This setting is only available for models with Ethernet.

The Bluetooth and Wi-Fi functions are provided by the optional wireless module.

Module name:WB Dongle;Model:TP8WB;FCCID:2AUTE-TP8WB

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

